


# PRE-INSTALLATION CHECKS

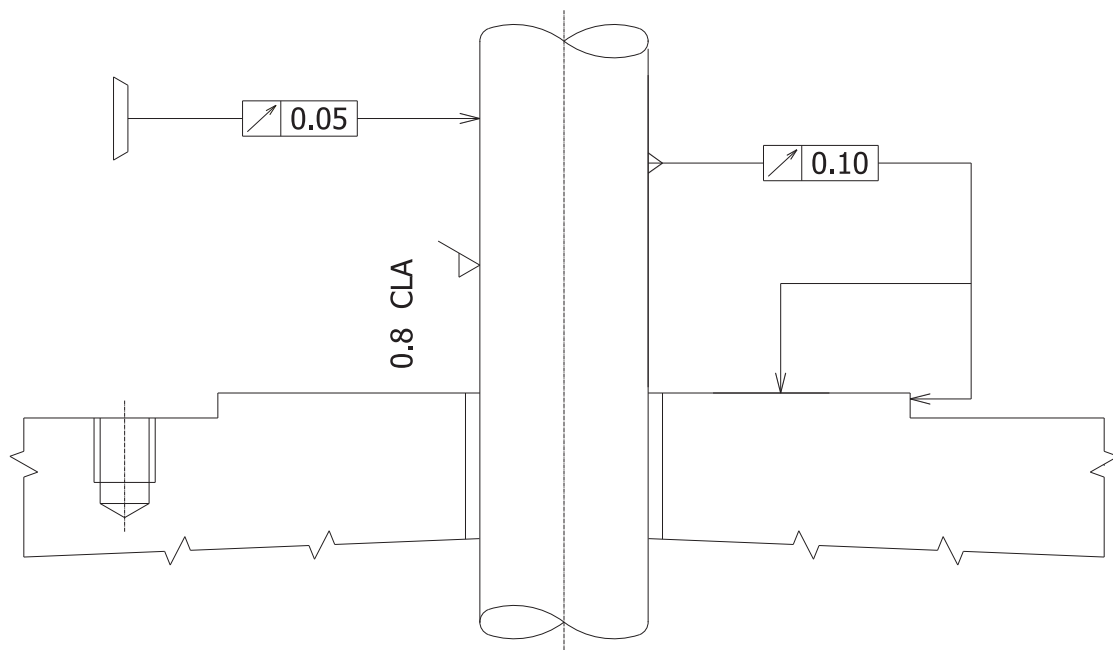

CUSTOMER TO MAINTAIN THE ABOVE  
BEFORE INSTALLING THE SEAL

(All dimensions in mm)